



BLACK BODY TEMPERATURE SOURCE

MODEL: BCAL 40

INSTRUCTION MANUAL



1. SAFETY INSTRUCTIONS

Use the BCAL 40 series only as specified in this manual. Otherwise, the protection provided by the BCAL 40 series may be impaired.

The following definitions apply to the terms “Warning” and “Caution”.



“Warning” identifies conditions and actions that may pose hazards to the user.



“Caution” identifies conditions and actions that may damage the BCAL 40 series being used.



Warnings

To avoid personal injury, follow these guidelines.

The BCAL 40 series must not be used for any purposes other than those described in this manual. The BCAL 40 series has been designed for interior use only and should not be used in hazardous areas, where vapor or gas leaks, etc. may constitute a danger of explosion.

The BCAL 40 series must be kept free within an area of 20 cm on all sides and 1 meter above the calibrator.

Never use heat transfer fluids such as silicone, oil, paste, etc. in the BCAL 40 series.

These fluids may penetrate the BCAL 40 series and cause damage or create poisonous fumes.

The BCAL 40 series must be switched off before any attempt to service the BCAL 40 series is made.

When cleaning the well, REMEMBER to wear goggles when using compressed air in the BCAL 40 series.

The BCAL 40 series must not be used in wet areas.

Use heat shield when calibrating at high temperatures

Do not touch the grid plate, the well or the insertion tube when the BCAL 40 series is heating up they may be hot.

Do not touch the tip of the sensor when it is removed from the insertion tube/well it may be very hot.



Cautions

To avoid possible damage to the BCAL 40 series, follow these guidelines.

DO NOT try to change the Factory setting values of the BCAL 40 series. The correct setting of these parameters is important to the safety and proper operation of the BCAL 40 series.

Always operate this BCAL 40 series at room temperature between 41°F and 104°F (5°C to 40°C).

Allow sufficient air circulation by leaving at least 6 inches (15 cm) of clearance around the BCAL 40 series.

The BCAL 40 series is a precision instrument. Although it has been designed for optimum durability and trouble free operation, it must be handled with care.

2. SPECIFICATIONS

MODEL	BCAL 40
Temperature Range	Body Mode : 20 to 50 °C / 68 to 122 °F Surface Mode : 0 to 100 °C / 32 to 212 °F
Resolution	0.01 °C
Stability	± 0.03°C
Display	3.5 inch True TFT display with touch screen
Accuracy	± 0.3°C
Temperature Readout	°C & °F at a time
Heating time	10 minutes (Amb. to 50 °C)
Stabilizing time	10 minutes
Aperture area (dia.)	25 mm
Emissivity	0.950
Dimension (L*W*H)in mm	210 L x 210 W x 140 H(Approx.)
Weight	3.7 kg
Power Consumption	Less than 100 VA
Power Supply	90 to 260V AC/DC / 50/60Hz

Note: Due to continuous product improvements, Published specifications may change with out notice


Standard Delivery

1. Basic Instrument
2. Spare fuses
3. Instruction manual
4. Mains card
6. Small extension tube
7. Large extension tube
8. Carry bag

Optional


1. Carrying case
2. ISO/IEC 17025 Calibration Certificate

3. MAIN SCREEN DESCRIPTION

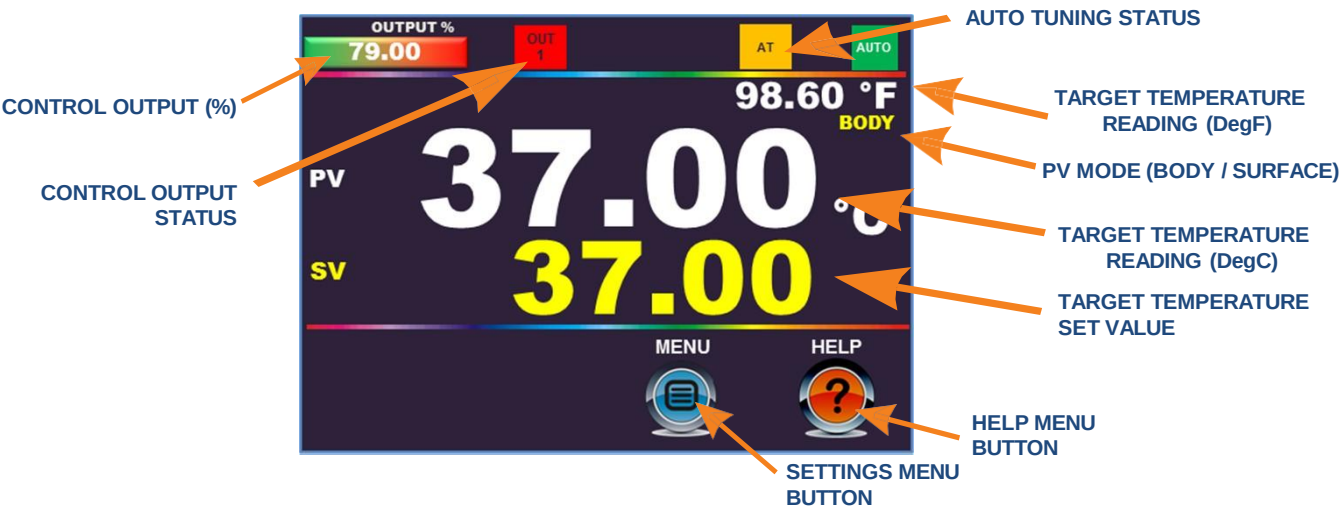

4. BLOCK SETTINGS

4.1. SET VALUE

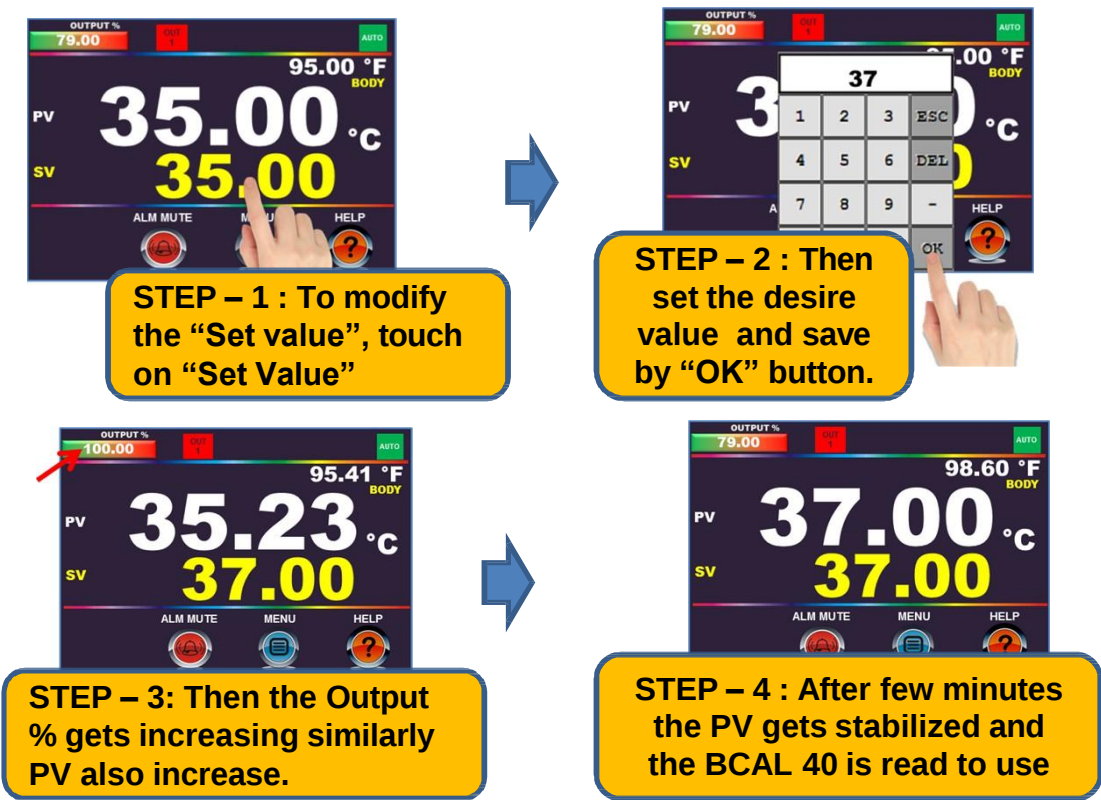


4.2. PV MODEL SELECT (BODY / SURFACE)



4.3. AUTO TUNING

Use this function only if the BCAL 40 specified stability not achieves in recommended Stable environment, to automatically calculate and set the optimize PID values to BCAL 40. Note : Always start this Auto tune process with SV “50.00”

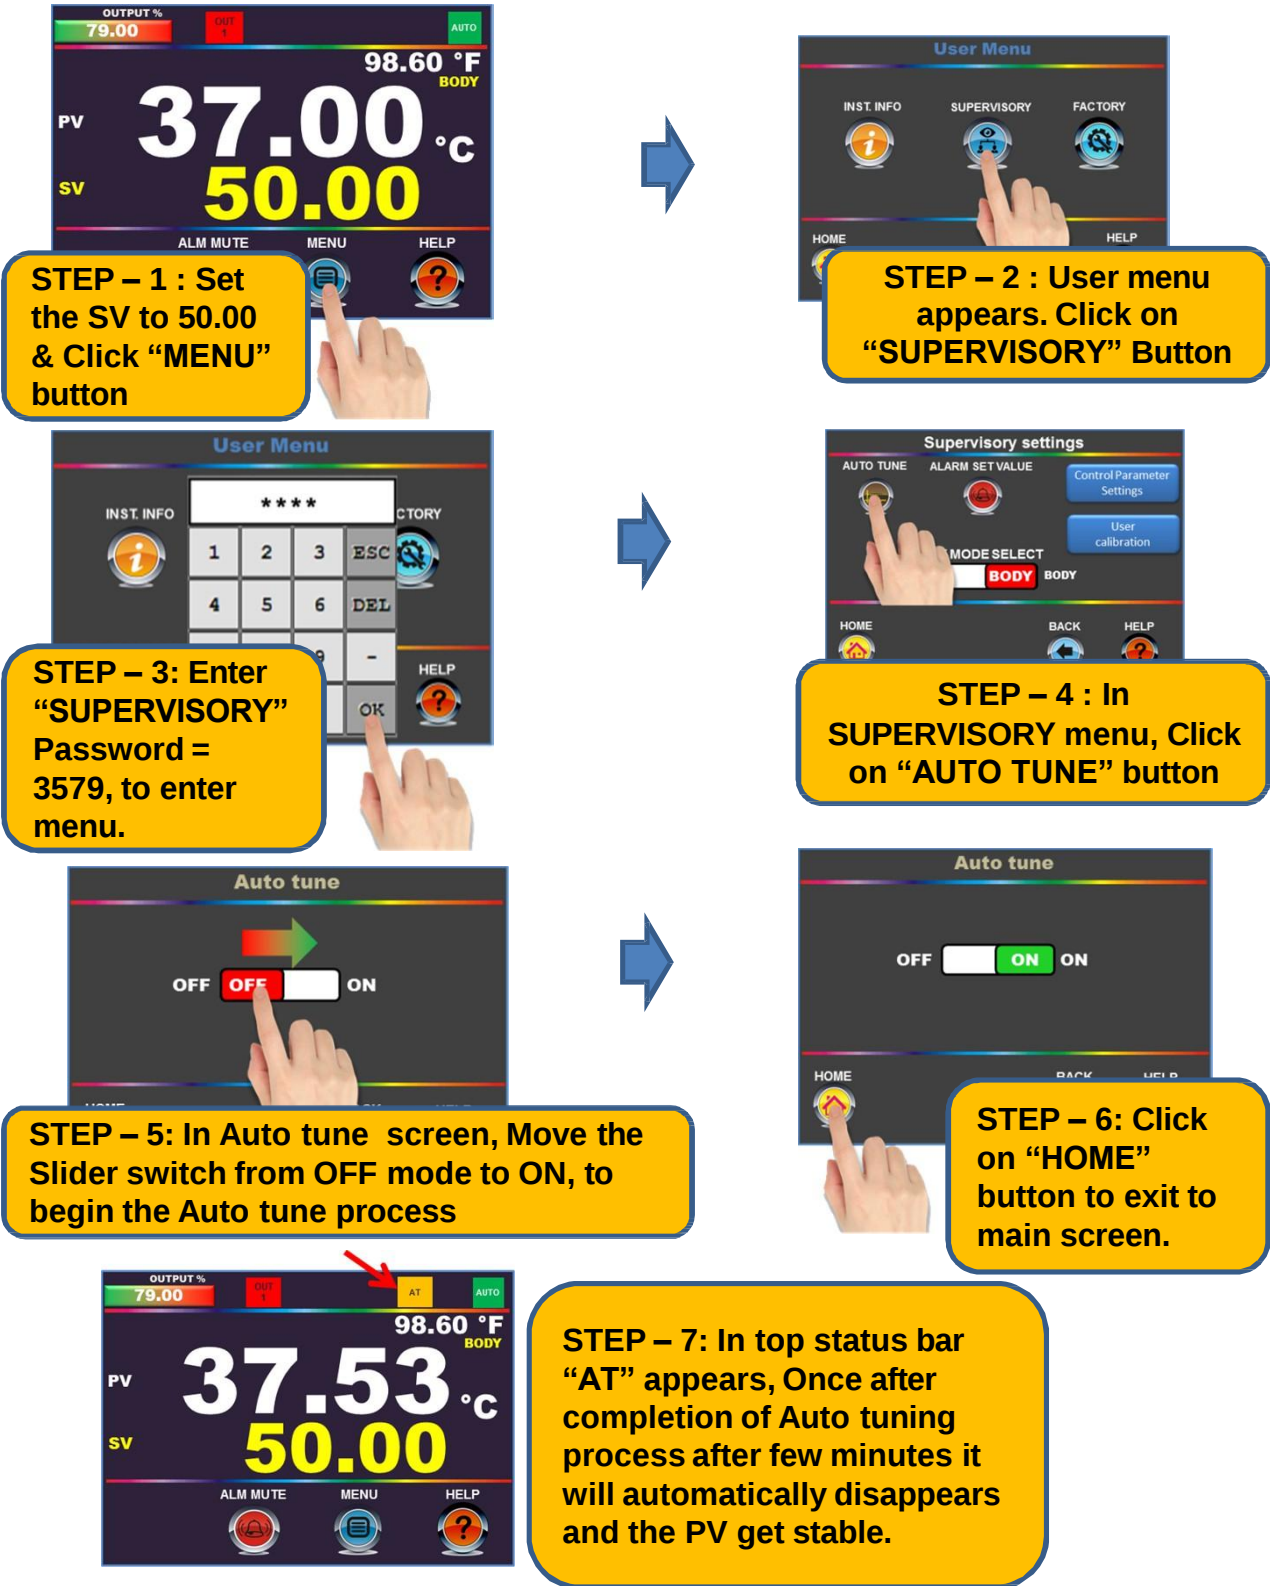

5. CALIBRATION PROCEDURE

1. INFRA RED THERMOMETER

PRECAUTIONS

- ☐ Check the input power supply before switching on the BCAL 40.
- ☐ Don't touch the target aperture during power ON time
- ☐ Set the BCAL 40 to 30°C for cooling.
- ☐ Switch off after reaching the ambient.
- ☐ Do not use oil or glycol in BCAL 40.
- ☐ Give sufficient warm-up time for both Master Instrument and UUC as per the operation manual before proceeding calibration.



- a) The control setting will usually be the normal working temperature of the thermometer to be tested.
- b) For calibration checks that are traceable to National Standards the target temperature is that indicated by the standard ONLINE PYROMETER.
- c) If traceability is not required the source can be used without the standard ONLINE PYROMETER.
- d) From previous work the temperature as shown on the control indication has been found to agree with the radiance temperature to within Accuracy.
- e) To make the lining up of BCAL 40 fixed installation radiation thermometers simpler an optical bench assembly is offered as an optional extra.
- f) When the source is stood on the optional transportation case, the bench to mid target dimension equals that of the optical bench assembly.
- g) Portable radiation thermometers are usually hand held.
- h) When calibrating radiation thermometers, it is important to follow documented step by step procedures to ensure that specified calibration conditions, such as calibration distance, furnace temperature and aperture size are always met.

ACCEPTANCE CRITERIA: Calibrated instrument must be accepted as per Manufacturer specification or as per the customer criteria if given by customer.

6. CONTACT US



SANSEL INSTRUMENTS AND CONTROLS
SANSEL CALIBRATION LABORATORIES LLP

ISO/IEC 17025 Accredited Calibration Laboratory by NABL CC - 2879
(Thermal, Mechanical, Electro-Technical, Dimension Parameters)



📍 1 / 46, 3rd Main Road, Ganga Nagar, MMDA Colony, Maduravoyal, Chennai - 600 095, India

☎ +91 44 2378 3951, 3941 📞 +91 72999 72092 ✉ info@sansel.net 🌐 www.sansel.net